




1 > MEASURE: Check base length and width to determine excavation footprint.

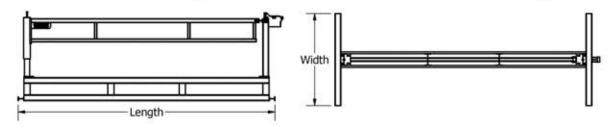

2 > EXCAVATE: Depth will vary depending on preferred gate height.

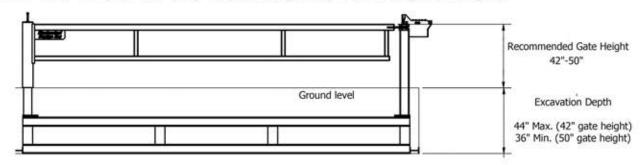

3 > PLACE GATE & LEVEL: Use of string line, laser level, etc is recommended. Backfil with gravel to level as needed.



- 4 > BURY THE BASE: Backfill of native soil with gravel top layer of 6" is recommended.
- 5 > FINE TUNE HEIGHT: Set height with adjustment bolt as shown.

